

Please read this document carefully!

Liability claims regarding damage caused by ignoring the information of this manual or improper installation or improper assembly will therefore be rejected.

Scope of delivery

One CPU PCB

Functionalities

 
With the update for you ThinkTank processor, your module takes advantage of the actual software changes and extensions.

Please read the information about new extensions and bugfixes on www.el-mod.de.


Installation and Connection

Before you begin with the installation please touch the antistatic packaging of the processor and something which is big and conductive (like a radiator or pc chassis).

Do the installation very carefully! Do not use force!

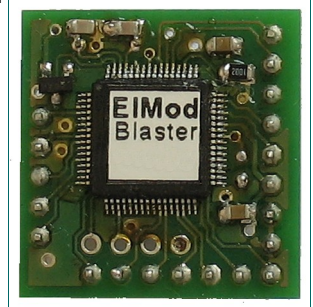


 • Grip the CPU PCB carefully in the edges as shown on the image.

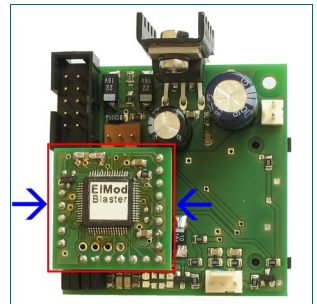

• Pull the PCB out of the socket.

 • Place the new PCB firmly in the socket.

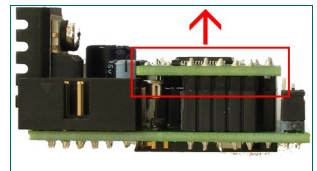

Initiation

The module is instantly operational. Please pay attention to possible changes of the adjustments (jumpers, program selection) and of the functionalities!

The latest description of each module can be found on www.el-mod.de.

Also pay attention to possible changes concerning the handling of the module.

You can find and download the latest instructions on our website.

EIMod Dipl.-Inf.(FH) Thomas Kusch und Jürgen K. Huber GbR
Millotstraße 15/1
D-72622 Nürtingen
DEUTSCHLAND / GERMANY