

**Please read this document carefully!**

Liability claims regarding damage caused by ignoring the informations of this manual or improper installation or improper assembly will therefore be rejected.


## Scope of delivery

Depending on order: one or several ThinkTank CPUs

## Functionalities

With the update for you ThinkTank processor, your module takes advantage of the actual software changes and extensions.

Please read the information about new extensions and bugfixes on [www.el-mod.de](http://www.el-mod.de).

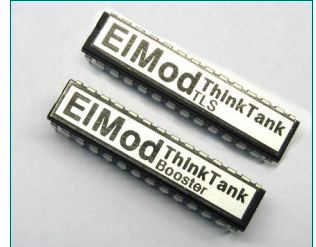

## Installation and Connection

**Before you begin with the installation please touch the antistatic packaging of the processor and something which is big and conductive (like a radiator or pc chassis).**

**Do the installation very carefully! Do not use force!**

- Memorize the orientation of the processor.
- Lift the old processor carefully with a small flat screw driver.
- Press the new processor into the socket. Take care that no connection pin is deformed. A gap of 0,5 to 1,0 mm (0,02" to 0.04") between the processor and the socket is normal.

## Initiation

The module ist instantly operational. Please pay attention to possible changes of the adjustments (jumpers, program selection) and of the functionalities!

The latest description of each module can be found on [www.el-mod.de](http://www.el-mod.de).

**Also pay attention to possible changes concerning the handling of the module.**

**You can find and download the latest instructions on our website.**

**Nicht geeignet für Kinder unter 14 Jahren.**

**Not suitable for Children under 14 years.**

**Ne convient pas pour des enfants de moins de 14 ans.**

**Niet geschikt voor kinderen onder de 14 jaar.**

EIMod Dipl.-Inf.(FH) Thomas Kusch und Jürgen K. Huber GbR  
Millotstraße 15/1  
D-72622 Nürtingen  
DEUTSCHLAND / GERMANY

